

Dry fit, dry fit, dry fit!

Make the parts fit before glueing!

Wash parts with warm soapy water before starting.

Use Cyano-Acrylate (superglue) to glue parts.

Check out WWW.Aircraftresourcecenter.com
for tips on building models.

Learn, teach and share pictures of your models
at ARCs Discussion forum.

Do not overtighten!
This will distort the fuselage.

(Some details omitted for clarity)


Some material may need to be removed here to make the fuselage diameter match the nosecone.
(better to fill a small gap than sand down a mismatch.)

Make sure the fuselage still closes with the cockpit in place, especially if you use an aftermarket cockpit.
(This area and the cockpit bottom wall may need to be modified)

Eliminate any mis-match before glueing!
Remove material here if there is a step.
Add material (small bumps of superglue) if there is void between the parts.

- ▯▯▯ IFF antenna, make 3 sets (one to replce tail-boom IFF)
- .010 X .030 X .152"(3.86mm) ▯
- .010 X .030 X .126"(3.2mm) ▯
- .010 X .030 X .082"(2.08mm) ▯

- ▯▯ Vortex generators, make 3 sets
- .010 X .020 X .078"(1.98mm) ▯
- .010 X .020 X .058"(1.47mm) ▯

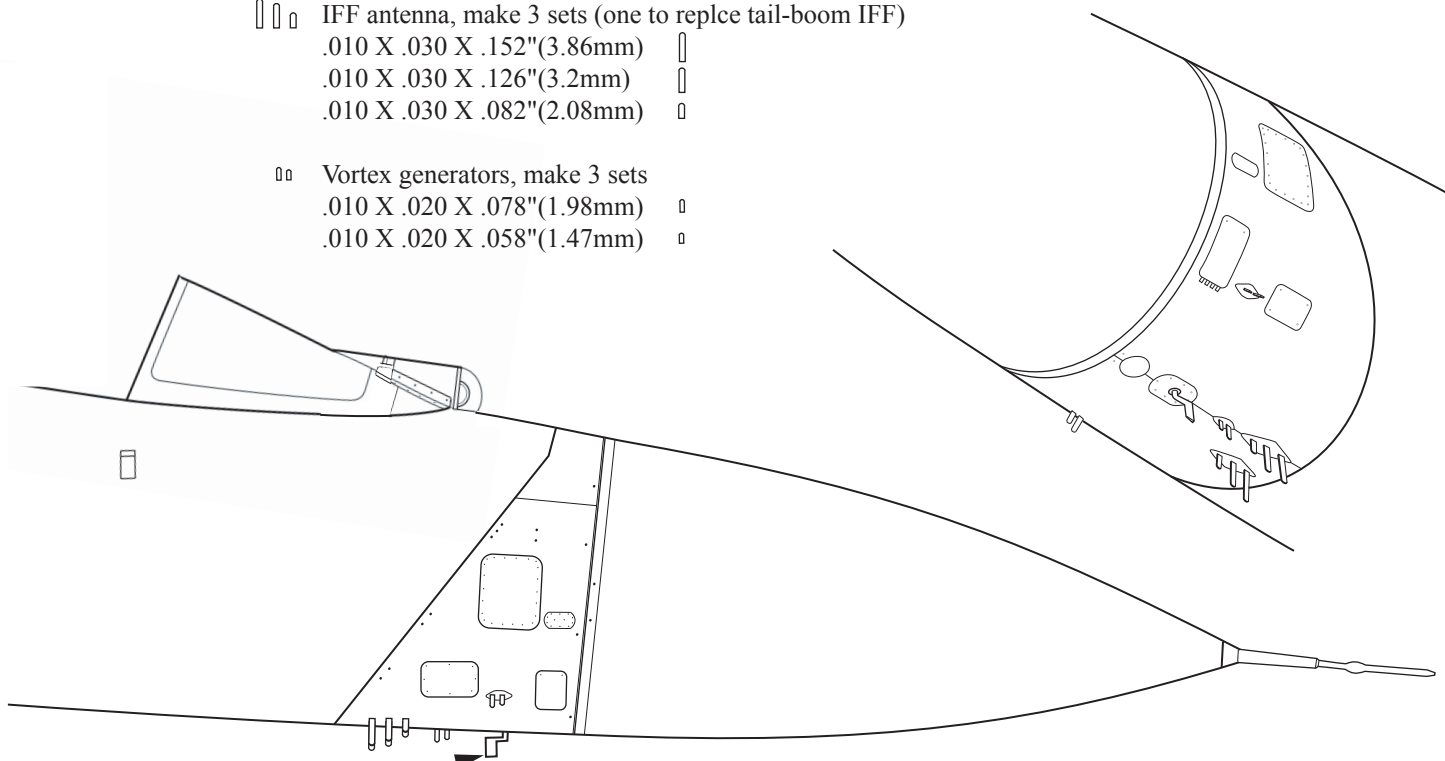

Trumpeter kit part E39