Zactomodels

WWW.Zactomodels.com

A-7 Seamless Intake
for Trumpeter 1/32 kit

© 2007 Zactomodels

Clean resin parts with soapy water before glueing or painting. Use Cyano-Acrylate (super glue) for resin
Resin parts can be heated and reshaped if they are warped. Dipping the parts in hot water works well. The thicker the part, the hotter the water should be and the longer it will need to be heated. Dip the parts in cold water once they are corrected. Do not store your models in hot areas or in direct sunlight!.

Check out www.AircraftResourceCenter.com for tips on building models. Learn, teach and share pictures of your models on ARCs discussion forum.

(While not exactly "seamless", the seam on this piece won't show once assembled.)

This intake part is molded in white resin with white pigment added so it shouldn't turn yellow over time. You may wish to paint it anyways just to be sure...

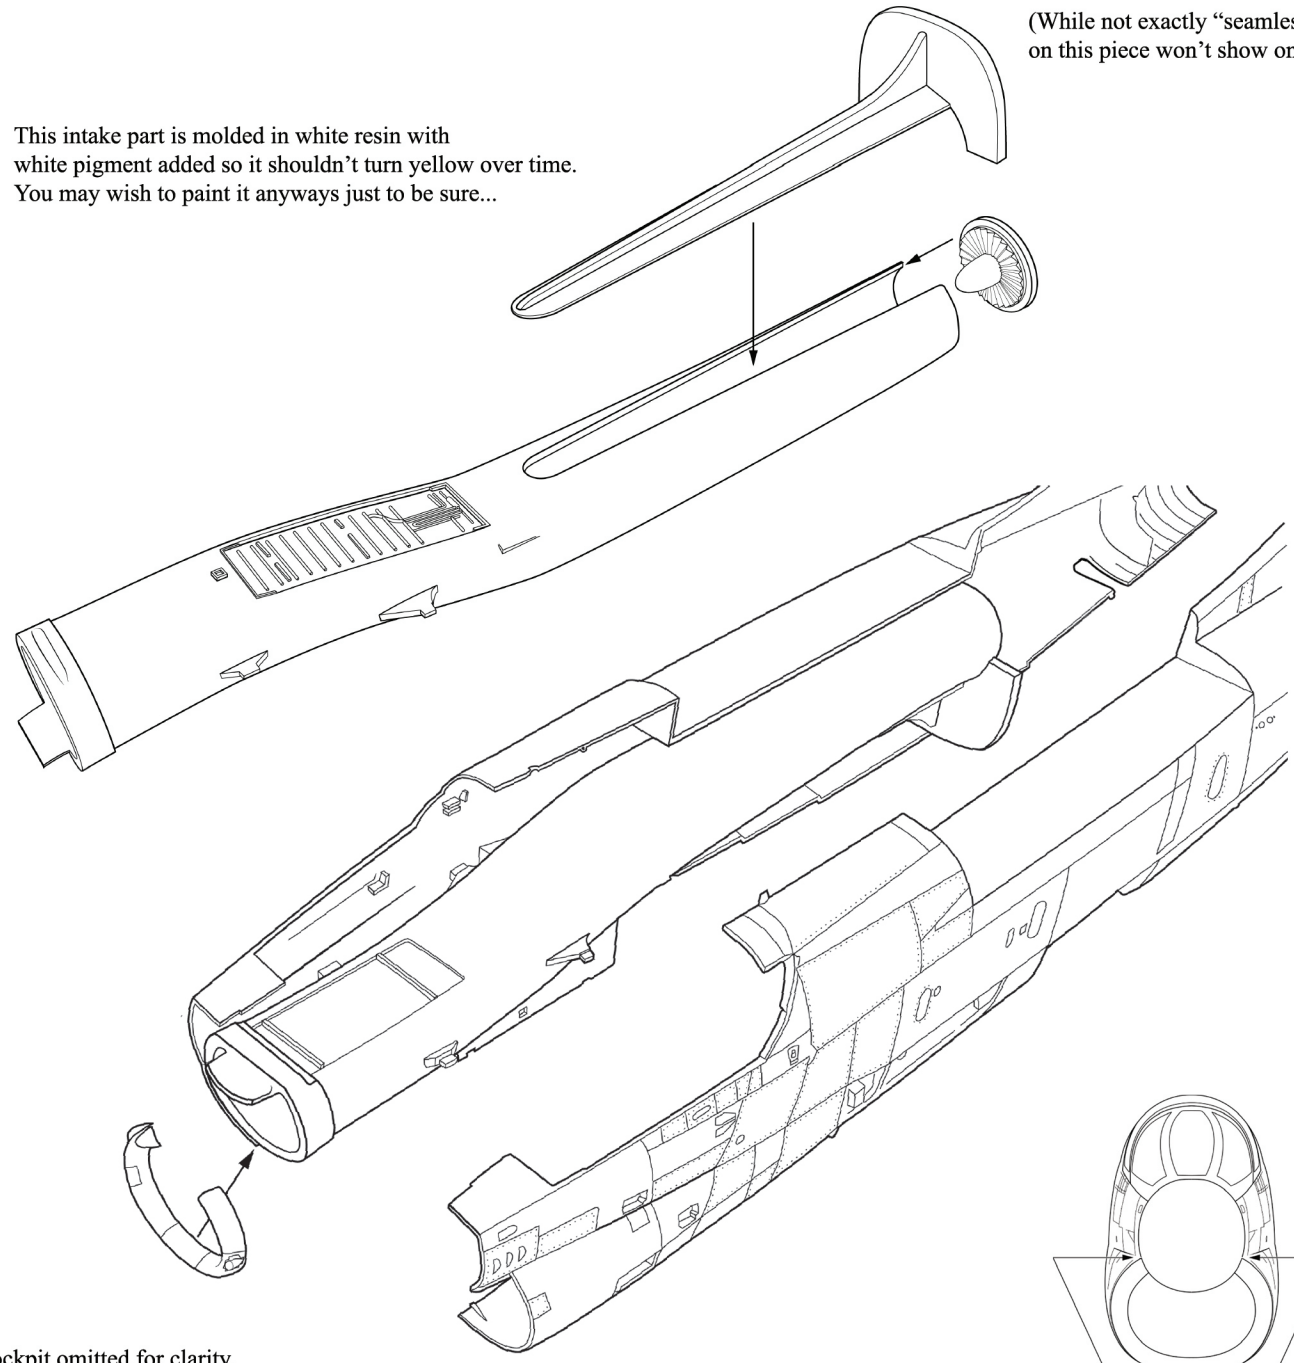

Cockpit omitted for clarity.

Nosecone omitted to simplify my drawing.

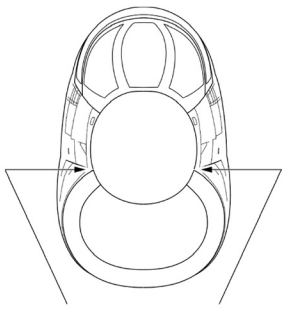

Apply pressure here while glueing.

Dry-fit the fuselage using the seamless intake and new intake lip. Make any necessary adjustments before glueing!